

Work Order ID 140180

140180

Page 1

Thursday, December 17, 2015 3:43:53 PM

Item ID: D044-719-011L02

Accept

N900040100

Setup Start

NS1

Revision ID:

Stop

NS2

Item Name: R44 Cabin Floor Protectors - Black

Start Date: 12/10/2015 Start Qty: 2.00

2

Cust Item ID:

Required Date: 12/17/2015 Req'd Qty: 2.00

2

Customer:

Reference:

Approvals: Process Plan: MJS Date: DEC 24 2015 Tooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start

NR1

Stop

NR2

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
D3281	Rev F
DSI 9504	A

DAS
6
9-89

MJS 16-02-17 (2)

100

Document Control
DOCUMENT CONTROL

0.00

100

DC

Memo

0.00

Doc.Control -USB or Paperwork

Photocopy bluefile and create labels per PPP D044-719-011L02 CHG004

(2)

DAS
38
9-89

16-02-12

110

Pick Kit

0.00

110

Packaging

Memo

0.00

Packaging

FEB 11 2016

2

DAS
6
9-89

1

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :				MRB (QSI042) Approval 	
Description Work Order Deviation				Disposition					
								Completed By	
								Lead hand / Supervisor Approval Verification	
								QC / QA Coordinator Approval	

Root Cause				FAULT CATEGORY			
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐		
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐		
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐		
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐		
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐		
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐		
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐		
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐		
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐		
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐		
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : ☐					
Misidentified ☐	Past Due ☐						

Work Order ID 140180

Thursday, December 17, 2015 3:43:53 PM

140180

Page 2

Item ID: D044-719-011L02

Accept

N900040100

Setup Start

NS1

Revision ID:

Stop

NS2

Item Name: R44 Cabin Floor Protectors - Black

Start Date: 12/10/2015 Start Qty: 2.00

2

Cust Item ID:

Required Date: 12/17/2015 Req'd Qty: 2.00

2

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start

NR1

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop

NR2

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

120 QC4- 100% Inspect kits for completeness 0.00

120

QC

Memo

0.00

Quality Control

DAS

38

9-89

16-02-12

130

0.00

130

Packaging

Packaging

Memo

0.00

Packaging

Identify and pack for shipping as per PPP D044-719-011L02
Location: FG026

DAS

27

9-89

FEB 12 2016

140

QC21- Final Inspection - Work Order Release

0.00

140

QC

Memo

0.00

Quality Control

MCS FEB 16 2016

St 20160212

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :				MRB (QSI042) Approval	
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐ Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐							
		OTHER : ☐							

Thursday, December 17, 2015 3:43:53 PM

140180

D044-719-0111 02

Required Qty: 2.00

IPP Rev:B as per DSI 9504

[illegible]

DQA: _____ Date: _____




WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause Environment ☐ Design ☐ Doc/Data ☐ Equip/Tooling ☐ Handling/Pre ☐ Material ☐ Internal Transport ☐ Tribal Knowledge ☐ LOA ☐ Substation ☐ Past Expiry Date ☐ Misidentified ☐ No Re-verification ☐ Operator ☐ Offset/Setup ☐ Supplier ☐ Training ☐ Use for Testing ☐ Poor Information ☐ Rushing ☐ Product Improvement ☐ Process Improvement ☐ Manufacturing Process ☐ Past Due ☐		FAULT CATEGORY Pressure/Forced ☐ Bending ☐ Centre Not Concentric ☐ Cracks ☐ Crimp/Kink/Ripple/Wave ☐ Cuffs ☐ Crushing ☐ Heat Treat ☐ Wave/Twist in Tube ☐ Marks/Chatter ☐ Temperature/Cure ☐ Set-up ☐ BOM/Route ☐ Broken/Damage/Defect ☐ Inspection Incomplete/Unqualified ☐ Contamination ☐ Countersink ☐ Cut Too Short ☐ Instructions Incomplete/Unclear ☐ Drill Holes ☐		Power Loss/Surge ☐ Folio/Program ☐ Grain ☐ Weld ☐ Wrong Stock Pulled ☐ Out of Sequence ☐ Off-set ☐ Mislabeled ☐ Fit/Function ☐ Misaligned/off center ☐ Positioned Wrong ☐ Outside Dimensions ☐ Over/Under tolerance ☐ Part Incorrect ☐ Part Lost/Missing ☐ Part Moved ☐ Drawing ☐ Finish ☐ Misread ☐ Turning Sequence ☐					
OTHER : ☐									

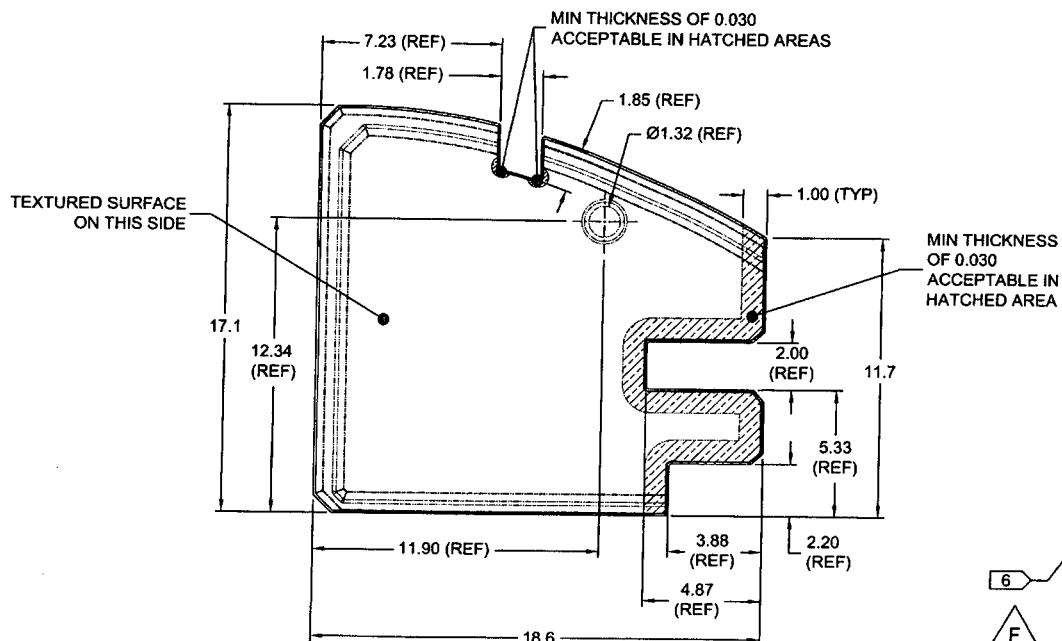

D3281-1 FLOOR PROTECTOR

NOTES:

- 1) MATERIAL: -1L02 = LEXAN F6006, BLACK No. 701, 0.093" THICK (MLEXS.093-F6006-02)
-1L08 = LEXAN 90318 (PROTECT-A-GLAZE), 0.118 THICK, 112-CLEAR (MLEXS.118-90318-08)
- 2) FINISH: NONE
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED
- 5) BREAK SHARP EDGES: 0.010 MAX
- 6) IDENTIFICATION: IDENT WITH DART P/N "D3281-1Lxx" AND B/N PER QSI 044 6.4 ALONG PERIMETER OF PART AS SHOWN.
- 7) WEIGHT: D3281-1L02 = 0.95 lb D3281-1L08 = 1.13 lb
- 8) THERMOFORM WITH MOLD D3281-1T1 PER DART QSI 022; TRIM AS SHOWN
MINIMUM THICKNESS AFTER FORMING: 0.070" EXCEPT WHERE INDICATED

0.95
0.50 (REF)




SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 14018045

15-12-24

RELEASED
2010-11-25

F	NOTES UPDATED. FLAG NOTE 6 WAS 7 & RELOC. D.E.O. D3281-E-1 INC. DIM 17.0 WAS 17.1 (ZN B5-3, B6-4) & 17.7 WAS 17.8 (ZN C5-3, C6-4) REF CAR 10-21.	JPH	10.09.27
E	-3/4" NOW TRIMMED FLAT: RMV 0.25 BEVEL TO FACILITATE TRIMMING (ZN D6-3, D4-4)	CP	10.01.05
D	THICKNESS 0.093 WAS 0.125, MIN THICKNESS 0.070 WAS 0.080, P/N AND B/N ID WITH VIBRATING STYLUS (ZN A7-1, A7-2, A7-3, A7-4); D3281-4 NOW ON PAGE 4; CORRECT WEIGHTS (ZN A8-1, A8-2, A8-3, A8-4)	PH	08.03.28
C	UPDATE DIMS TO MATCH PARTS: COLOUR 701 WAS 700; GENERAL UPDATE	LE	07.10.09
B	NOW LEXAN; DIMS AS MANUFACTURED	CP	05.11.25
A	NEW ISSUE	CP	04.05.03
REV.	DESCRIPTION	BY	DATE

DESIGN	92	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	92		
CHECKED	92	DRAWING NO. D3281	REV. F
MFG. APPR.	92	TITLE	SCALE
APPROVED	92	FLOOR PROTECTOR	NTS
DE APPR.	92	COPYRIGHT © 2004 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	
DATE	10.09.27		

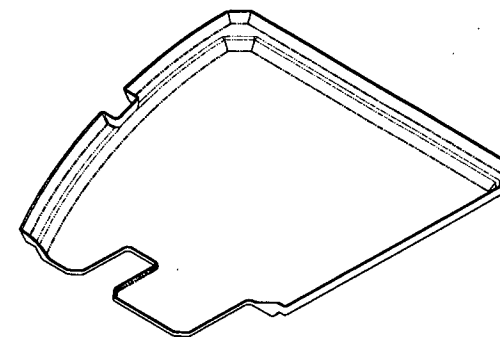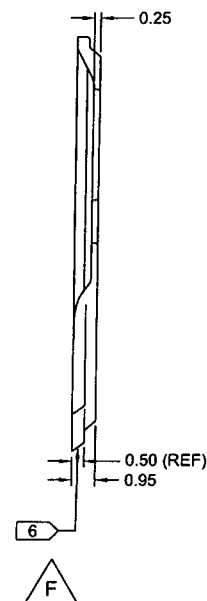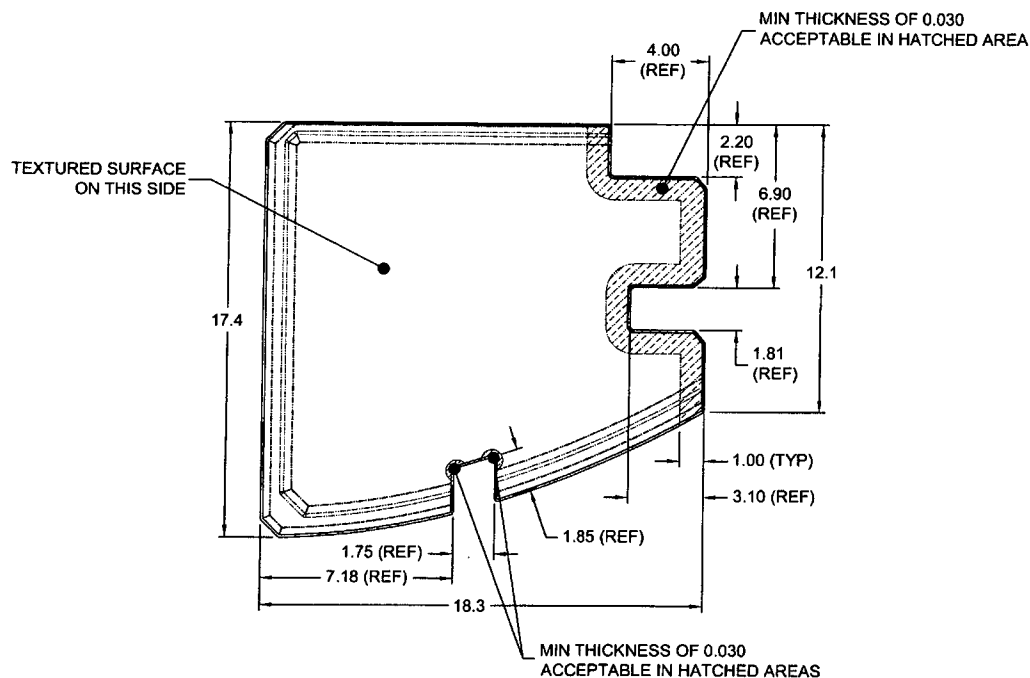



D3281-2 FLOOR PROTECTOR

NOTES:

- 1) MATERIAL: -2L02 = LEXAN F6006, BLACK No. 701, 0.093" THICK (MLEXS.093-F6006-02)
-2L08 = LEXAN 90318 (PROTECT-A-GLAZE), 0.118 THICK, 112-CLEAR (MLEXS.118-90318-08)
- 2) FINISH: NONE
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED
- 5) BREAK SHARP EDGES: 0.010 MAX
- 6) IDENTIFICATION: IDENT WITH DART P/N "D3281-2Lxx" AND B/N PER QSI 044 6.4 ALONG PERIMETER OF PART AS SHOWN.
- 7) WEIGHT: D3281-2L02 = 0.95 lb D3281-2L08 = 1.13 lb
- 8) THERMOFORM WITH MOLD D3281-2T1 PER DART QSI 022; TRIM AS SHOWN
MINIMUM THICKNESS AFTER FORMING: 0.070" EXCEPT WHERE INDICATED

RELEASED
2010-11-25

DESIGN		DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV.
MFG. APPR.		D3281	SHEET 2 OF
APPROVED		TITLE	SCALE
DE APPR.		FLOOR PROTECTOR	NT
DATE	10.09.27	COPYRIGHT © 2004 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

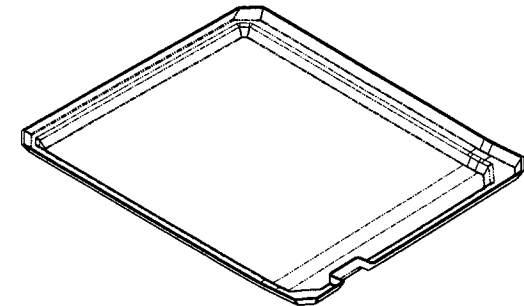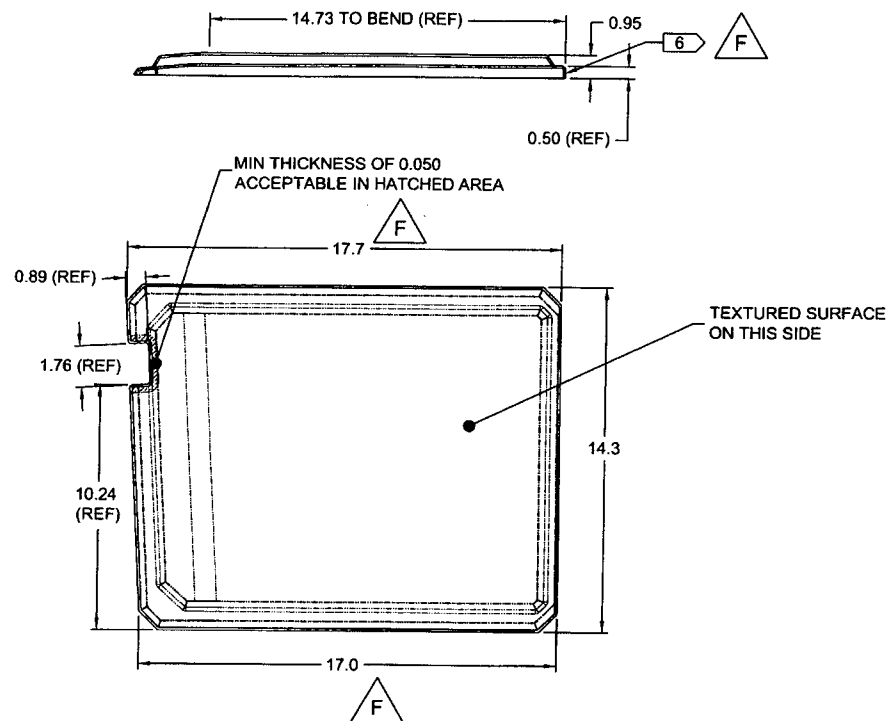




D3281-3 FLOOR PROTECTOR

NOTES:

- 1) MATERIAL: -3L02 = LEXAN F6006, BLACK No. 701, 0.093" THICK (MLEXS.093-F6006-02)
-3L08 = LEXAN 90318 (PROTECT-A-GLAZE), 0.118 THICK, 112-CLEAR (MLEXS.118-90318-08)
- 2) FINISH: NONE
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED
- 5) BREAK SHARP EDGES: 0.010 MAX
- 6) IDENTIFICATION: IDENT WITH DART P/N "D3281-3Lxx" AND B/N PER QSI 044 6.4 ALONG PERIMETER OF PART AS SHOWN.
- 7) WEIGHT: D3281-3L02 = 0.87 lb D3281-3L08 = 1.05 lb
- 8) THERMOFORM WITH MOLD D3281-3T1 PER DART QSI 022; TRIM AS SHOWN
MINIMUM THICKNESS AFTER FORMING: 0.070" EXCEPT WHERE INDICATED

RELEASE
2010-11-25

DESIGN		DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.		D3281	SHEET 3 OF 4
APPROVED		TITLE	SCALE
DE APPR.		FLOOR PROTECTOR	NTS
DATE	10.09.27	COPYRIGHT © 2004 BY DART AEROSPACE LTD	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.			

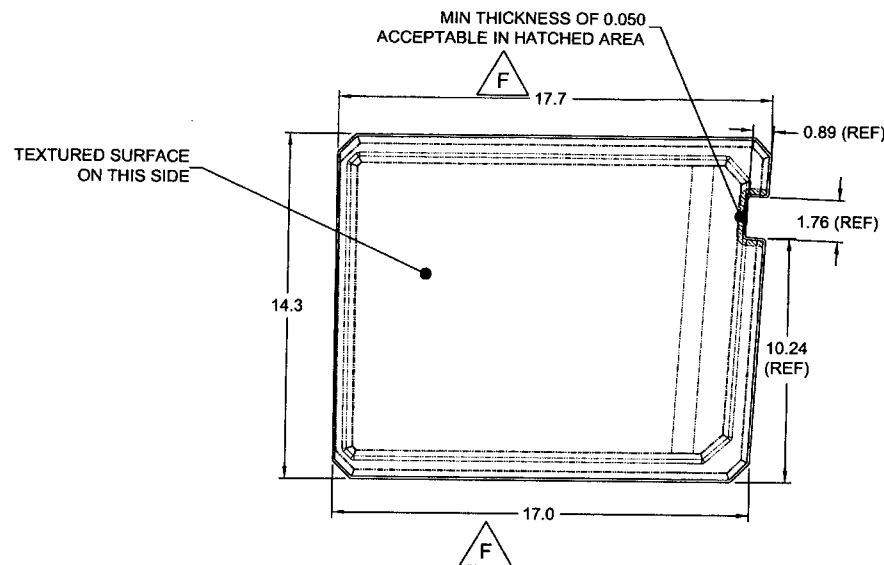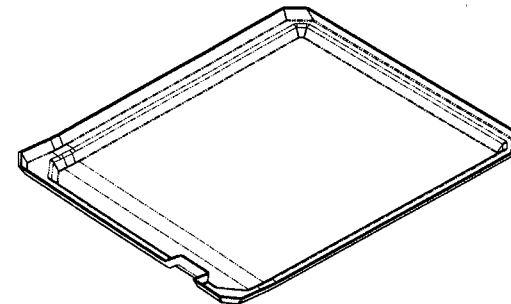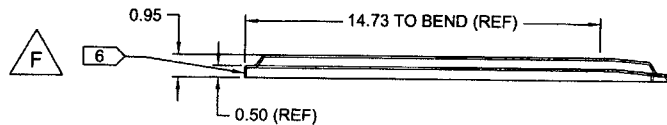

D3281-4 FLOOR PROTECTOR

D3281-4 NOTES:

- 1) MATERIAL: -4L02 = LEXAN F6006, BLACK No. 701, 0.093" THICK (MLEXS.093-F6006-02)
-4L08 = LEXAN 90318 (PROTECT-A-GLAZE), 0.118 THICK, 112-CLEAR (MLEXS.118-90318-08)
- 2) FINISH: NONE
- 3) TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED
- 4) UNITS: INCHES UNLESS OTHERWISE NOTED
- 5) BREAK SHARP EDGES: 0.010 MAX
- 6) IDENTIFICATION: IDENTIFICATION: IDENT WITH DART P/N "D3281-4Lxx" AND B/N PER QSI 044 6.4 ALONG PERIMETER OF PART AS SHOWN.
- 7) WEIGHT: D3281-4L02 = 0.87 lb D3281-4L08 = 1.05 lb
- 8) THERMOFORM WITH MOLD D3281-4T1 PER DART QSI 022; TRIM AS SHOWN
MINIMUM THICKNESS AFTER FORMING: 0.070" EXCEPT WHERE INDICATED

RELEASED
2010-11-25

DESIGN		DART AEROSPACE LTD	
DRAWN		HAWKESBURY, ONTARIO, CANADA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.		D3281	SHEET 4 OF 4
APPROVED		TITLE	SCALE
DE APPR.		FLOOR PROTECTOR	NTS
DATE	10.09.27	COPYRIGHT © 2004 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS IIN-D044-719 REV. A
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D044-719 REV. 0

REF TCCA STC: SH04-40
REF FAA STC: SR02051NY
REF EASA STC: EASA.IM.R.S.01075

PURPOSE:

To add the D044-719-011L08 Clear Cabin Floor Protectors. The -011L08 kit is similar to the existing -011 kit, however the plastic is transparent instead of solid black. The existing D044-719-011 kit will be re-identified as D044-719-011L02.

CHANGE:

The D044-719-011L08 Cabin Floor Protectors kit consists of four transparent plastic trays that are placed on the cabin floor to protect the carpets from damage. The -011L08 kit should be installed per the -011 kit of Installation Instructions IIN-D044-719 and maintained per Instructions for Continued Airworthiness ICA-D044-719. The parts list and weight & balance for the -011L08 kit is given below.

PARTS LIST

QTY -011L02	QTY -011L08	Part Number	Description
X		D044-719-011L02	Cabin Floor Protectors (Black)
	X	D044-719-011L08	Cabin Floor Protectors (Clear)
1		D3281-1L02	Floor Protector, Fwd LH, Black
	1	D3281-1L08	Floor Protector, Fwd LH, Clear
1		D3281-2L02	Floor Protector, Fwd RH, Black
	1	D3281-2L08	Floor Protector, Fwd RH, Clear
1		D3281-3L02	Floor Protector, Aft LH, Black
	1	D3281-3L08	Floor Protector, Aft LH, Clear
1		D3281-4L02	Floor Protector, Aft RH, Black
	1	D3281-4L08	Floor Protector, Aft RH, Clear
8	8	D2854-1-100	Looped Velcro Strip
8	8	D2854-3-100	Hooked Velcro Strip

WEIGHT AND BALANCE

Installation	Weight	Lateral		Longitudinal	
		Arm	Moment	Arm	Moment
D044-719-011L02	3.9 lb	0 in	0 in-lb	50 in	195 in-lb
Cabin Floor Protectors	1.8 kg	0 m	0 m-kg	1.27 m	2.3 m-kg
D044-719-011L08	4.4 lb	0 in	0 in-lb	50 in	220 in-lb
Cabin Floor Protectors	2.0 kg	0 m	0 m-kg	1.27 m	2.5 m-kg

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-Q-01

APPROVED
BY: 
D. SHEPHERD (DE # 02)

DATE: 10.02.24
CERT. NO.: SH04-40
ISSUE NO.: 1

A	NEW ISSUE	CP	10.02.24
REV.	DESCRIPTION	BY	DATE
DESIGN		DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN			
CHECKED		DRAWING NO. REV. A	
MFG. APPR.	N/A	DSI 9504 SHEET 1 OF 1	
APPROVED		TITLE SCALE	
DE APPR.		FLOOR PROTECTOR KIT, CLEAR NTS	
DATE	10.02.24	COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

2.0 GENERAL NOTES

COMPATIBILITY

Compatibility of this installation with the aircraft is the **responsibility of the installer**. Ensure that this installation does not conflict with a previous modification.

3.0 INSTALLATION PROCEDURE

The Dart D044-719-011 Cabin Floor Protectors should be installed as follows:

- 3.1 Remove any existing floor protection that may interfere with the installation of the D3281-1, D3281-2, D3281-3, or D3281-4 Floor Protectors .
- 3.2 Apply qty(2) 10" long velcro strips to the bottom of all four Floor Protectors as shown in Figure 1. Remove adhesive back.
- 3.3 Place the D3281-1, D3281-2, D3281-3, and D3281-4 Floor Protectors on the cabin floor of the aircraft as shown in Figure 1. Push the trays down so they are firmly seated on the floor (ie. will not move during flight) and will not interfere with any of the aircraft controls.

NOTE: Previous interior modifications may necessitate minor trimming of D3281-1/-2/-3/-4 to facilitate installation. Trim to fit as required.

NOTE: To clean floor protectors, use mild soap or detergent with warm or cold water. Do not use abrasive or highly alkaline cleaners.

4.0 WEIGHT AND BALANCE

The following is the weight increase associated with the Cabin Floor Protectors. Be sure to subtract the weight of any parts removed.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
D044-719-011	3.9 lb	0 in	0 in-lb	50 in	195 in-lb
Cabin Floor Protectors	1.8 kg	0 m	0 m-kg	1.27 m	2.3 m-kg

5.0 PARTS LIST

Qty -011	Part Number	Description
X	D044-719-011	CABIN FLOOR PROTECTORS
1	D3281-1	FLOOR PROTECTOR, FWD LH
1	D3281-2	FLOOR PROTECTOR, FWD RH
1	D3281-3	FLOOR PROTECTOR, AFT LH
1	D3281-4	FLOOR PROTECTOR, AFT RH
8	D2854-1-100	LOOPED VELCRO STRIP
8	D2854-3-100	HOOKED VELCRO STRIP

• COPYRIGHT © 2004 BY DART AEROSPACE LTD. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

Revision: **A**
Date: 04.06.10

REFERENCE ONLY

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS IIN-D044-719 REV. A
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D044-719 REV. 0
REF TCCA STC: SH04-40
REF FAA STC: SR02051NY
REF EASA STC: EASA.IM.R.S.01075

PURPOSE:

To add the D044-719-011L08 Clear Cabin Floor Protectors. The -011L08 kit is similar to the existing -011 kit, however the plastic is transparent instead of solid black. The existing D044-719-011 kit will be re-identified as D044-719-011L02.

CHANGE:

The D044-719-011L08 Cabin Floor Protectors kit consists of four transparent plastic trays that are placed on the cabin floor to protect the carpets from damage. The -011L08 kit should be installed per the -011 kit of Installation Instructions IIN-D044-719 and maintained per Instructions for Continued Airworthiness ICA-D044-719. The parts list and weight & balance for the -011L08 kit is given below.

PARTS LIST

QTY -011L02	QTY -011L08	Part Number	Description
X		D044-719-011L02	Cabin Floor Protectors (Black)
	X	D044-719-011L08	Cabin Floor Protectors (Clear)
1		D3281-1L02	Floor Protector, Fwd LH, Black
	1	D3281-1L08	Floor Protector, Fwd LH, Clear
1		D3281-2L02	Floor Protector, Fwd RH, Black
	1	D3281-2L08	Floor Protector, Fwd RH, Clear
1		D3281-3L02	Floor Protector, Aft LH, Black
	1	D3281-3L08	Floor Protector, Aft LH, Clear
1		D3281-4L02	Floor Protector, Aft RH, Black
	1	D3281-4L08	Floor Protector, Aft RH, Clear
8	8	D2854-1-100	Looped Velcro Strip
8	8	D2854-3-100	Hooked Velcro Strip

WEIGHT AND BALANCE

Installation	Weight	Lateral		Longitudinal	
		Arm	Moment	Arm	Moment
D044-719-011L02	3.9 lb	0 in	0 in-lb	50 in	195 in-lb
Cabin Floor Protectors	1.8 kg	0 m	0 m-kg	1.27 m	2.3 m-kg
D044-719-011L08	4.4 lb	0 in	0 in-lb	50 in	220 in-lb
Cabin Floor Protectors	2.0 kg	0 m	0 m-kg	1.27 m	2.5 m-kg

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED
BY: 
D. SHEPHERD (DE # 02)

DATE: 10.02.24
CERT. NO.: SH04-40
ISSUE NO.: 1

A	NEW ISSUE	CP	10.02.24
REV.	DESCRIPTION	BY	DATE
DESIGN		DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN			
CHECKED		DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9504	SHEET 1 OF 1
APPROVED		TITLE	SCALE
DE APPR.		FLOOR PROTECTOR KIT, CLEAR	NTS
DATE	10.02.24	COPYRIGHT © 2010 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	